


How Do I Program the DIRECTORY MENU to SPEED DIAL on an 8510/20/28 ISDN Phone?

8510/8528 phone holds 30 names/numbers and the 8520 phone holds 144

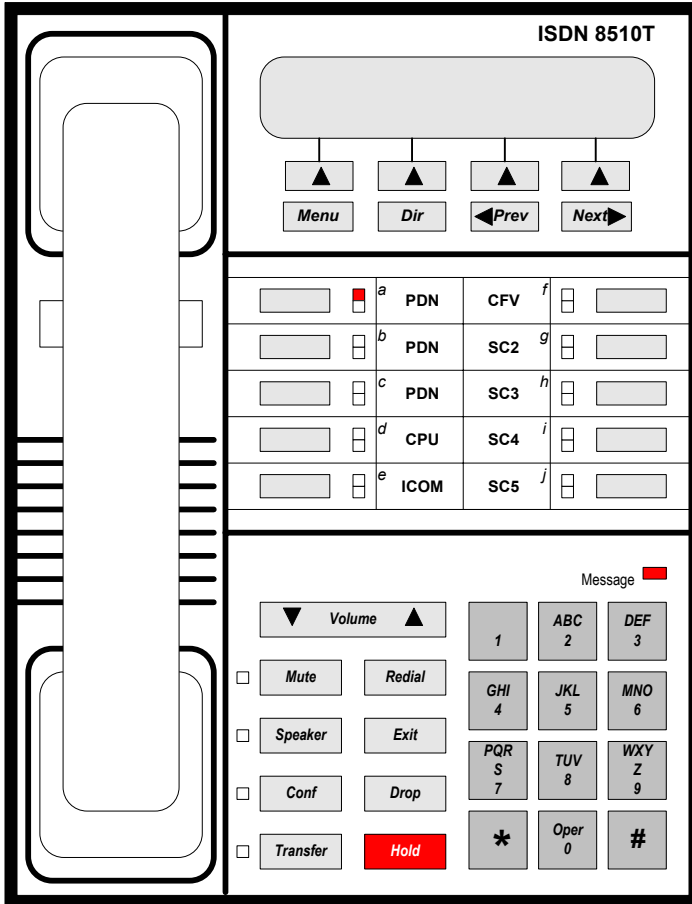

Press

Press the ▲ SOFT KEY under DIRECTORY

Press the SOFT KEY▲ under ADD/DEL

Press the SOFT KEY▲ under ADD, enter desired number (24-digits maximum) digits

Press the SOFT KEY▲ under DONE, enter name (5-letters maximum)

Press the SOFT KEY▲ under DONE

Press button

To Use:

Press

Press the SOFT KEY under the name, the telephone number will be automatically dialed

To see more names Press

8510 phone holds 30 names and the 8520 phone holds 144.

To Change, Add, Delete:

Press

Press the ▲ SOFT KEY under DIRECTORY

Press the ▲ SOFT KEY under ADD/DELETE

How do I program KEY PAD Speed Dialing?

1-Digit Key Pad Speed Calling

Press the SPEAKER button or lift the HANDSET ... dial code *74, hear the dial-tone, dial the speed code (2 through 7), dial the phone number in the usual manner (24-digits maximum) ... Press the [#] ... Listen for the confirmation tone.

2-Digit Key Pad Speed Calling

Press the SPEAKER button or lift the HANDSET ... dial code *75 ... hear dial-tone ... dial the speed code (20 through 49) ... dial the phone number in the usual manner ... Press the [#] ... Listen for the confirmation tone.

To Use: Press the SPEAKER button or lift the HANDSET ... dial the 1-digit speed code or the 2-digit speed code ... Press the [#] key ... the number will ring.

http://www.cit.nih.gov/dnst/DNSTweb/FAQ/Isdn_quick_reference_guide.htm#sc_keypad1